




CLOTHES DRYER BELT INSTALLATION DIAGRAM

IMPORTANT: UNPLUG YOUR APPLIANCE AND TURN OFF POWER AT THE BREAKER BEFORE SERVICING. IF YOU HAVE DOUBTS OR ARE UNFAMILIAR WITH THIS TYPE OF INSTALLATION WORK, SEEK THE SERVICES OF A QUALIFIED SERVICE TECHNICIAN. SUPPLYING DEMAND ASSUMES NO RESPONSIBILITY FOR THE IMPROPER INSTALLATION OF THIS PRODUCT.


TYPICAL REPLACEMENT INSTRUCTIONS FOR DRYER BELTS

FRIGIDAIRE

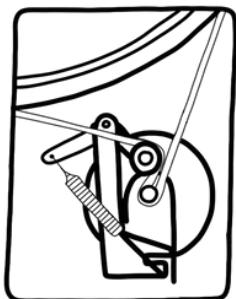


134503600

GE

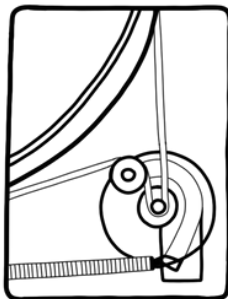


WE12X82

SPEED QUEEN

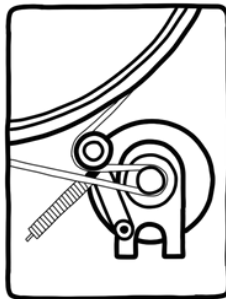


40111201

ELECTROLUX

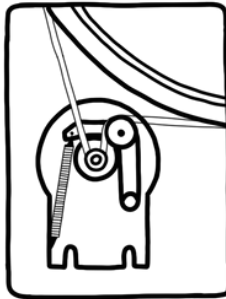


134719300

MAYTAG

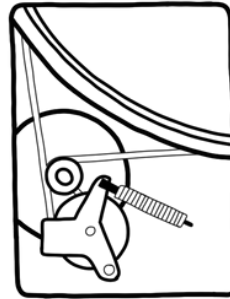

312959

WHIRLPOOL LG / SAMSUNG

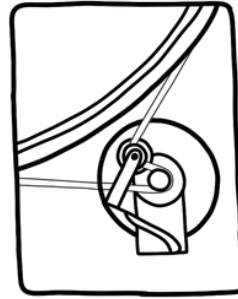

INSTRUCTION FOR PARTS*

*341241, 3394652, 4400EL2001A, 6602-001655, W10205415, W10198086, W10136934, 857168