

ANTI-VIBRATION PADS SD69001

Reduces washer & dryer noise and vibrations

- Recessed area on top surface to keep washer steady
- Works effectively on all types of machines
- Works on any type of floor surface, reducing vibrations and surface scratches
- Contains 4 pads

EASY INSTALLATION

No tools or adhesive required

1. Level appliance according to manufacturer's instructions
2. Lift one side of the machine and place the anti-vibration pad under each leveling leg
3. Leg should fit in the recessed are of the pad
4. Repeat for the other side of the appliance
5. Check appliance for stability and make adjustments to leveling legs as needed

CALIFORNIA PROPOSITION 65 WARNING

This product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.



SUPPLYING DEMAND[®]

supplyingdemand.com



@therepairbrand | supplyingdemand