



RADIANT HEAT ELEMENT

SD8273993

IMPORTANT: *Unplug your appliance and turn off power at the breaker before servicing. If you have doubts or are unfamiliar with this type of installation work, seek the services of a qualified Service Technician. Supplying Demand assumes no responsibility for the improper installation of this product.*

The instructions below are general instructions for installation of a radiant heat element. Your particular element and range may vary in how to install. It is always best to refer to the owners guide for your range.

The tools needed for this repair are needle nose pliers and 1/4" nut driver.

STEP 1: Disconnect the range from the power source.

STEP 2: Open the range door and remove the screws located underneath the top panel of the range.

STEP 3: Once the screws are removed, lift up the cooktop panel and brace it with a support so it doesn't fall.

STEP 4: Locate the old radiant heat element you are replacing. The element is usually held by clips. Using the needle nose pliers, pull out the clips. Gently remove the radiant heat element.

STEP 5: Unclip the hot cooktop indicator light from the panel allowing easy access to the element wiring.

STEP 6: Take note of the order of which wire is connected to which terminal on the element to make the reinstallation process easier. Using needle nose pliers, detach the wires connected to the radiant heat element.

STEP 7: Take the new radiant heat element and attach the wires to their respective terminals on the new element using the needle nose pliers.

STEP 8: Make sure to plug back in the hot cooktop indicator light to the panel.

STEP 9: Line up the surface element to the clip holes and attach each clip using the needle nose pliers.

STEP 10: Once the element is secured with the clips, remove the support holding the cooktop panel and gently lower the panel back on the frame of the range.

STEP 11: Reattach the screws that were removed.

STEP 12: Reconnect the range to the power source.