

DISHWASHER POWER CORD KIT

SDW11365014



- 6 FT LONG
- 3 WIRE/120 VOLT
- INCLUDES GROMMET
- STRAIN RELIEF ADDED FOR SAFETY
- STRAIGHT PLUG

KIT CONTENTS
POWER CORD WITH RIGHT ANGLE HEAD,
GROMMET, AND METAL STRAIN RELIEF



WARNING: To prevent electrical shock, disconnect electrical power supply to dishwasher at the fuse box or panel when installing this kit. Replace all parts and panels before operating. Failure to do so can result in injury or death.

POWER CORD INSTALLATION WARNINGS & NOTICES

Check electrical requirements and outlet locations. For your safety, read instructions completely and carefully.

- **ELECTRICAL REQUIREMENTS:** If codes permit and a separate grounding wire is used, it is recommended that a qualified electrician determine that the grounding path is adequate. A 120-volt, 60-Hz AC-only, 15 or 20-amp, fused electrical supply is required. Time-delay fuse or circuit breaker is recommended.
- **GROUNDING INSTRUCTIONS:** This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock or fire by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.
- **WARNING:** Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Do not modify the plug provided with the appliance. If it will not fit in the outlet, have a proper outlet installed by a qualified electrician.

TO MOUNT THE NEW ASSEMBLY

- Disconnect power at the breaker and unplug the dishwasher.
- Remove the access panel and terminal box cover.
- Install the metal strain relief in the hole in the back of the terminal box (Fig. 1).
- Install the wires (opposite of the plug end) of the cord into the terminal box through the metal strain relief. Avoid having excess wire length inside the terminal box. Tighten the clamp or connector on the power cord using a Phillips screwdriver.
- Remove the ground connector screw from the terminal box and place it through the ring terminal of the green ground wire of the power cord. Reattach and tighten the ground connector screw to the terminal box.

Flip over to continue

DISHWASHER POWER CORD KIT SDW11365014

- Remove the unused terminal block screw adjacent to the screw securing the white wire from the appliance wiring harness, place the screw through the ring terminal of the white wire on the power cord, and reattach and tighten the screw. Repeat these steps for installing the black wire on the power cord adjacent to the black wire on the wiring harness (Fig. 2).
- Replace the terminal box cover.
- If the dishwasher receptacle is located in an adjacent cabinet, pass the dishwasher cord through the hole in the cabinet.
 - **NOTE:** If the cabinet side walls are wood, sand the edge of the hole until smooth. If the side walls are metal, install the grommet supplied in this kit.
 - **IMPORTANT:** The strain relief **MUST BE USED** to prevent the power cord wires from being pulled out of the terminal box accidentally.
- Refer to the dishwasher installation instructions for remaining installation steps. Follow the dishwasher installation manual regarding the application of power and attachment of the dishwasher access panel.

Figure 1


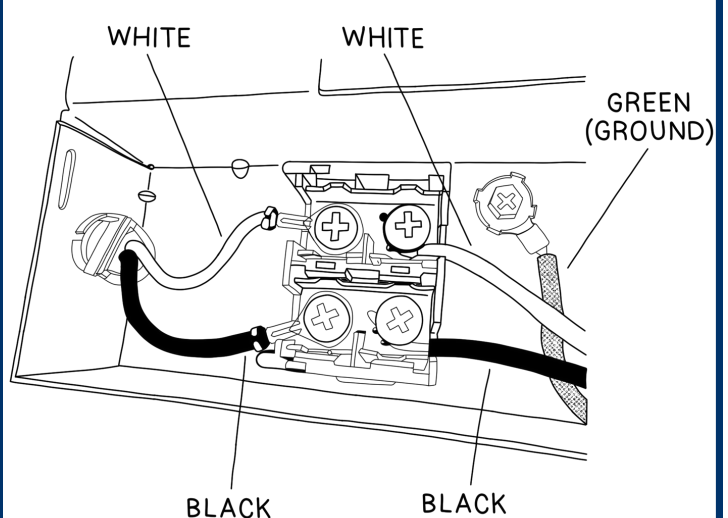


Figure 2

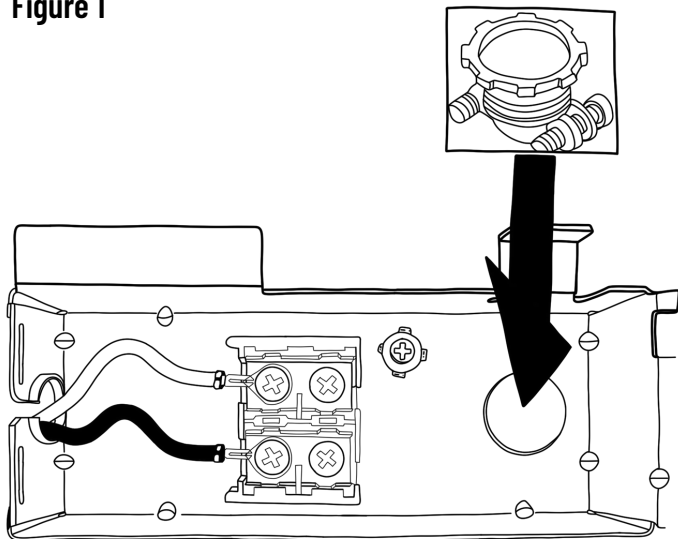

LISTED
E496998

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov