

WASHER LID LOCK KIT SDWH08X32697


IMPORTANT: Unplug your appliance and turn off power at the breaker before servicing. Turn off water supply. If you have doubts or are unfamiliar with this type of installation work, seek the services of a qualified Service Technician. Supplying Demand assumes no responsibility for the improper installation of this product.

KIT CONTENTS:

- Lid Lock and Harness Assembly
- Metal Lid Bezel (White)
- Metal Lid Striker (White)
- Glass Lid Bezel (Gray)
- Glass Lid Striker (Gray)


INSTRUCTIONS:

This kit is compatible with both metal and glass lid washers. For glass lid washers use the gray striker and gray bezel. For metal lids use the white striker and white bezel. The lid switch/lock and harness are compatible with both.

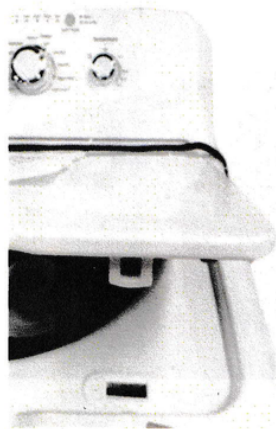


METAL LID WASHER

REPLACEMENT LID LOCK WITH HARNESS MAY LOOK LIKE EITHER OF THESE:

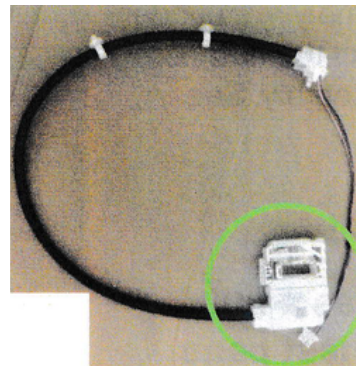

BOTH ARE GOOD

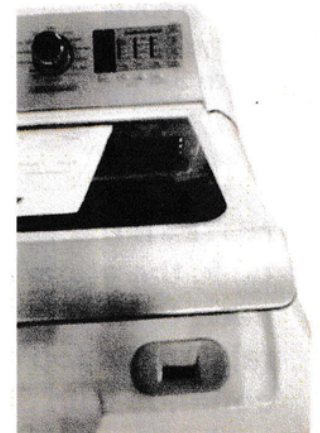

GLASS LID WASHER

1. Ensure the lid is unlocked, unplug your appliance, and turn off power at the breaker before servicing.
 2. Remove the bezel by reaching under the top cover to release the bezel tabs. Push out and up on the tabs. *See Figure 1.*
 3. Using a small screwdriver, push down gently on the locking tab that prevents the lock assembly from moving. *See Figure 2.*
 4. Slide the lock assembly to the left first to disengage the right lock body tab. Then slide to the right, allowing the lock assembly to disengage from the top cover.
 5. Slide the lock assembly from under the top cover and disconnect the harness connector from the lock assembly. *See Figure 3.*
- Note: If the washer has a bulk tank, the steps on the last page need to be done first before raising the top cover. Otherwise continue with Step 6.*

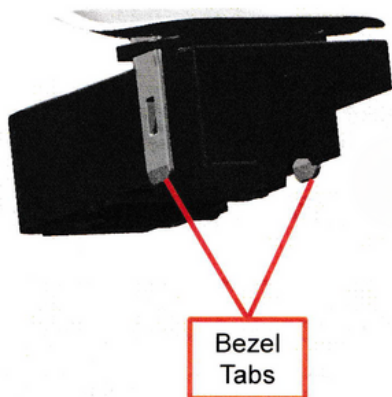


FIGURE 1

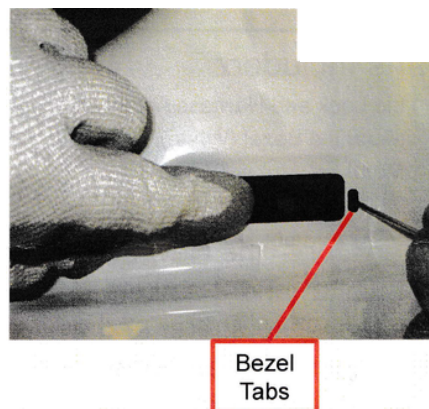


FIGURE 2

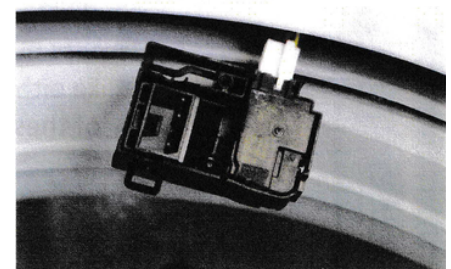


FIGURE 3

WASHER LID LOCK KIT SDWH08X32697

6. Tape the lid to the top cover to ensure it will not fly open.
7. Remove (2) 1/4 inch hex head screws securing the backsplash to the top cover. *See Figure 4.*
8. Push and rotate the backsplash toward the rear of the washer to disengage the pressure tube from the main board.
9. Once the pressure tube is disengaged from the main board, rotate the backsplash toward the front of the washer. Depending on the model being serviced, remove the (2) hex head screws securing the backsplash to the top cover and then slide the rear panel to the right, or (4) hex head screws securing the rear panel to the backsplash. *See Figure 5.* Disconnect the lid switch/lock harness from the main board and push through the top cover.
10. Remove (2) 1/4 inch hex head screws at the rear of the top cover (one on each side) securing the top cover to cabinet. Unclip the (2) front clips and raise the top cover up to access the lid switch/lock harness. *See Figure 6.*

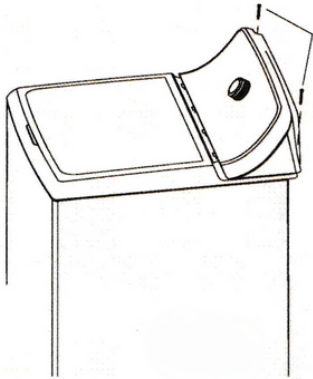


FIGURE 4

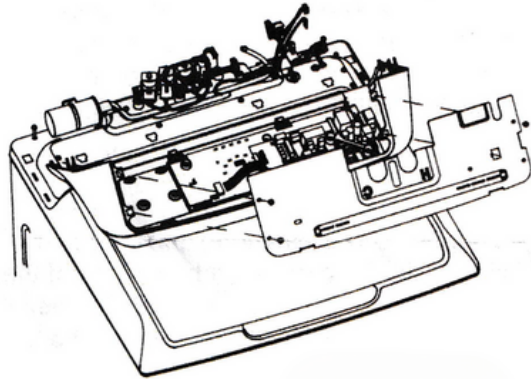


FIGURE 5

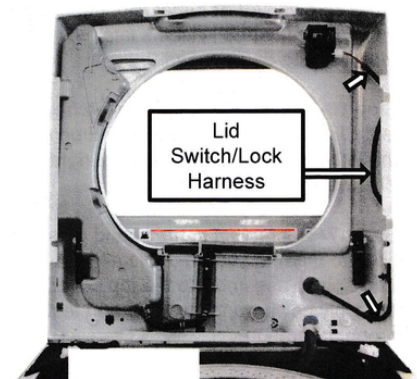


FIGURE 6

11. Remove the original lid switch/lock harness from the top cover harness clips.
 12. Reinstall the new lid switch/lock harness assembly onto the top cover.
 13. When reinstalling the lid switch/lock assembly to the top cover, bring the left side tab of the lid switch/lock assembly up through the top cover opening first. Then slide it to the right. This will clip in place.
 14. Reattach the top cover to the cabinet. Then push the bezel through the top cover. Push down on both sides of the bezel until it clicks. This secures the bezel and lid switch/lock assembly in position.
 15. Open the lid and remove the original lid latch. For metal lid remove (2) Phillips head screws. Glass lid, using a small screwdriver or paper clip, push in on the locking tab and twist the latch to remove. *See Figure 8 and 9.*
 16. To reinstall, angle the latch to the left. Slide the locking tab in first, then seat the latch in the lid and turn to the right. This will lock the latch in place.
 17. Reconnect the harness and pressure hose to the main board, reinstall backsplash assembly to the top cover, resupply power to the washer and test for proper operation.
- Important:** Before securing the backsplash to the top cover, ensure the pressure hose did NOT slip off of the port on the main board. *See Figure 10.*

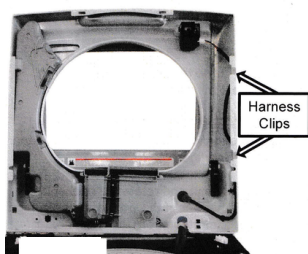


FIGURE 7

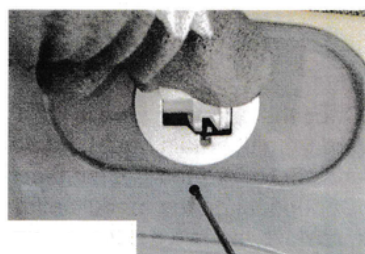


FIGURE 8

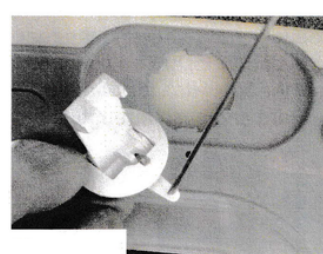


FIGURE 9

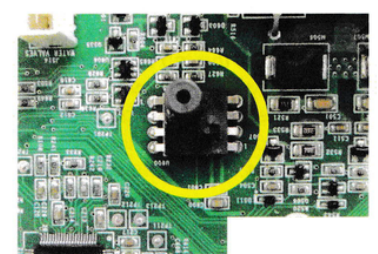


FIGURE 10

WASHER LID LOCK KIT SDWH08X32697

STEPS TO TAKE IF WASHER HAS A BULK TANK:

1. Before raising the top cover, if there is detergent in the bulk tank, reach under the dispenser box and feel for the rubber tube. Pull the tube downwards to disengage it from the dispenser box. *See Figure 4.*
2. Using a pair of pinch pliers, clamp the tube so the detergent does not flow from the bulk tank into the dispenser box. The tube is pretty flexible and does not take much pressure to clamp it closed. Drain hose and or Air-conditioning pinch-off pliers both work well. *See Figure 5.*
3. Remove the bleach/bulk tank funnel by reaching between the top cover and tub cover and push up on the bottom of the funnel.

To prevent detergent from spilling out of the tank fill opening while servicing or removing the washer from a drain pan, because the tank does not seal closed, a sponge or magic eraser can be inserted into the tank opening to prevent detergent from spilling out. *See Figure 6.* Then raise the top cover to access the lid lock harness.

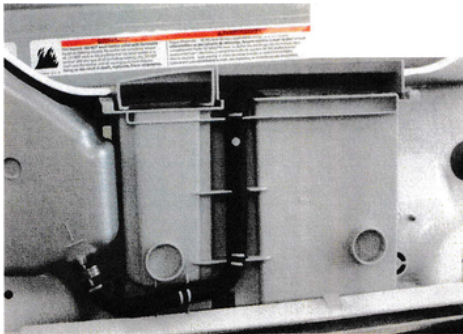


FIGURE 4

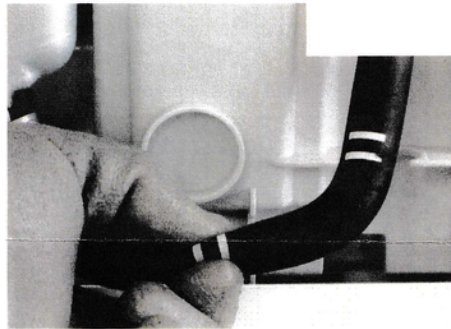


FIGURE 5

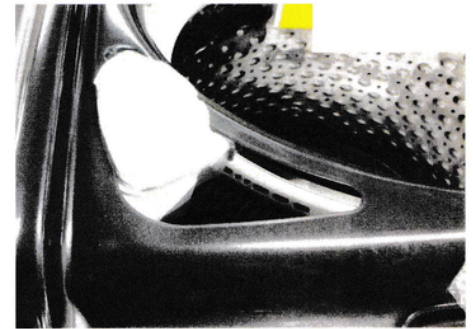


FIGURE 6