

UNIVERSAL DISHWASHER POWER CORD SDWX09X70910

- 5'4" LONG
- 3 WIRE/13 AMP
- EASY TO INSTALL
- INCLUDES WIRE NUTS
- STRAIN RELIEF ADDED FOR SAFETY
- MOLDED-ON STRAIGHT PLUG

KIT CONTENTS

3 UL Listed Wire Nuts
Power Cord



WARNING: To prevent electrical shock, disconnect electrical power supply to dishwasher at the fuse box or panel when installing this kit.

POWER CORD INSTALLATION WARNINGS & NOTICES

For your safety, read instructions completely and carefully.


- Improper connection of the equipment-grounding conductor can result in a risk of electric shock or fire. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Do not modify the plug contained in this kit. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.
- **IMPORTANT:** Observe all governing codes and ordinances.
- **NOTE TO INSTALLER:** Be sure to leave instructions for the consumer's and local inspector's use.
- **NOTE TO CONSUMER:** Keep instructions with your Owner's Manual for future reference.
- **CABINET PREPARATION:** The power supply receptacle for the appliance shall be installed in a cabinet or on a wall adjacent to the under-counter space which the appliance is to be installed.
- There shall be an opening through the partition between the dishwasher and power supply receptacle compartments that is large enough for the attachment plug to pass through. The longest dimension of the opening shall not be more than 38 mm (1.5").
- The edges of the opening between the compartments shall, if the partition is wood, be smooth and rounded, or if the partition is metal, be covered with an edge protector.
- Care shall be exercised when the appliance is installed or removed to reduce the likelihood of damage to the power supply cord.
- **GROUNDING INSTRUCTIONS:** This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock or fire by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.

UNIVERSAL DISHWASHER POWER CORD SDWX09X70910

CONNECT POWER CORD WIRES TO DISHWASHER WIRES

1. Turn off circuit breaker or disconnect fuse.
2. Remove the junction box cover.
3. Snap the plastic retainer end of the power cord through the large hole in the back of the junction box.
4. Locate the three dishwasher wires (white, black, and green) with the stripped ends. Using UL listed wire nuts included in the kit, connect incoming white to white, black to black, and incoming ground to green wire.
5. Install the junction box cover. Check that wires are not pinched under the cover.

NOTE: Check that harness leads are threaded through the small hole in the bracket.

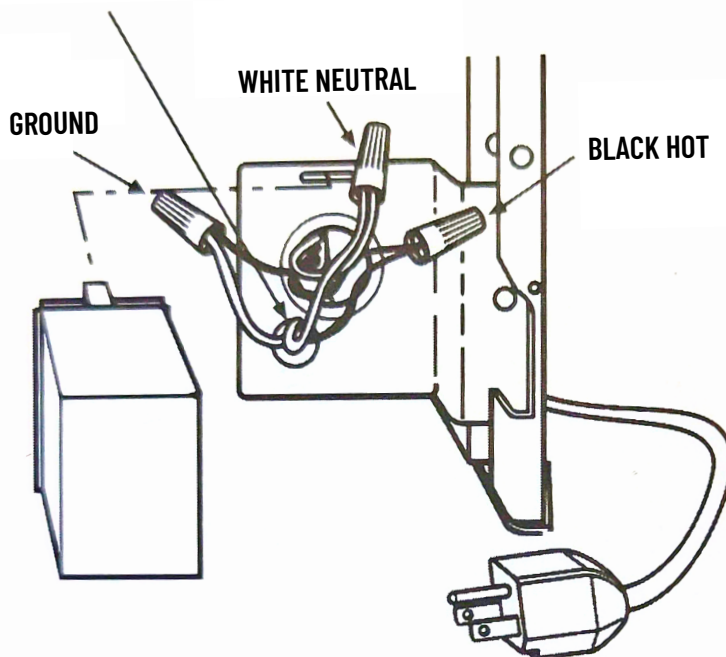

13A
125/250V
SJT16/3C

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov